





ENVIRO Fan Coil Controller Guide


WIRED CONTROLLER

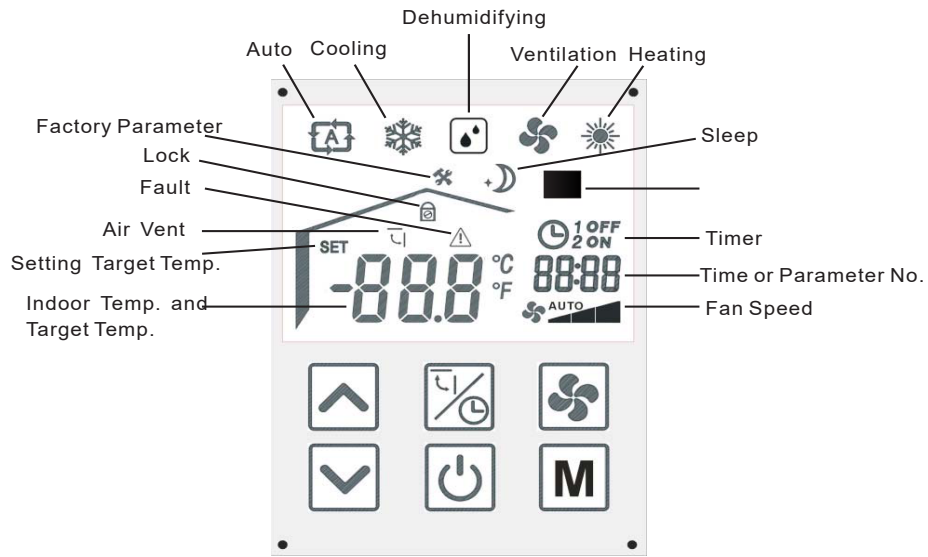



 Power: Power on/off, cancel, return.

 Air Vent/Time: Display time, set timer, turn on/off air vent.

 Fan Speed: Set the fan speed.

 Up: Turn page up, increase value.

 Down: Turn page down, decrease value.

 Mode: Change running modes.

ON/OFF

Hold the Power button down for 0.5seconds to turn On and Off.

MODES

Press the mode button to select from the 5 modes; Auto, Cooling, Dehumidification, Ventilation and Heating (the modes are displayed across the top of the controller).

NOTE: In Auto, Heating, Cooling modes the indoor temperature will be displayed after 5seconds in which time the set temperature is displayed. In Dehumidification and ventilation mode the indoor temperature is displayed immediately.

SETTING THE TEMPERATURE

Press either the UP or Down button to change the set temperature. Once there is 5 seconds of noactivity the selected value will be automatically saved.

SETTING FAN SPEED

Press the FAN button to scroll through the fan settings; low, medium, hi, and auto.

NOTE: In AUTO Mode and Dehumidification Mode the fan speed is set automatically

SETTING FAN SPEED TO HIGH

Hold the FAN button down for 5 seconds to set it to Hi. Press the FAN button down for a further 5 seconds to return it to its previous setting.

SETTING THE TIMERS

Hold down the Air Vent / Time button for 2 seconds to enter the power off setting screen. The delay hours until the unit will turn off will appear in the right bottom corner (above fan speed). Use the UP and DOWN buttons to select from 1 to 11 hours.

Hold down the Air Vent / Time button again to enter into the power on setting screen. Use the UP and DOWN button to select from 1 to 11 hours.

Press the Air Vent/Time button again to enter sleep mode

Press the Air Vent/Time button again to save the setting.

NOTE: If at anytime during the setting there is no activity for 5seconds the controller will return to the main screen.

CHECKING PERFORMANCE

Hold down the UP and DOWN buttons together to display the coil temperature. After releasing the buttons the display will return to the main screen after 3 seconds.

AIR VENT

Press the Air Vent / Time button to turn on the air vent. Press again to turn off.

KEYBOARD LOCK

Hold down the POWER button for 5 seconds to lock the keyboard. Hold down the POWER button for a further 5 seconds to release the keyboard.

FAULTS

If there is a fault a P00 number will appear on the screen. Press the UP or Down button to scroll through the faults. Press the POWER button to toggle between the main screen and the fault screen.

